


TOOLS REQUIRED: HA1180 Air Pressure Gauge,
Straight Blade Screwdriver

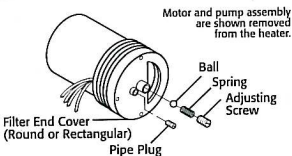

1. Unplug heater.
2. Remove pipe plug located on your left hand side of filter end cover.
3. Insert air pressure gauge in pipe plug hole.
4. Remove adjusting screw, spring and ball will follow.
5. Install in this order: ball, spring, and adjusting screw.
6. Plug heater in and adjust the air pressure to correct setting as indicated in owner's manual.
7. Unplug heater.
8. Remove air pressure gauge and replace pipe plug.

Refer to owner's manual for detailed instructions.
See Application Guide for Model Listing (FA7007)

WARNING: Never service heater while it is plugged in, operating, or hot. Severe burns and electrical shock can occur.

800 397 7553

120521-03

